
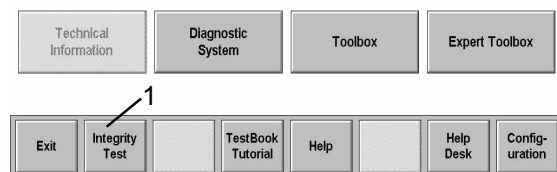
 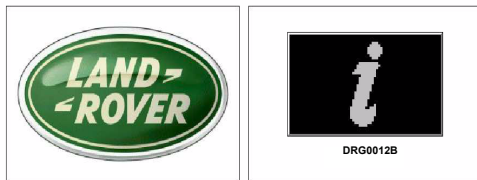


INTEGRITY TESTS

If a problem is suspected with the T4 equipment, the Integrity Tests provide a means for checking whether or not the equipment is functioning correctly.

NOTE: Always perform these tests before calling the help line, to allow T4 to determine if there is an error with the equipment.


The Integrity Tests can only be selected from the Welcome screen. If there is a problem accessing the Welcome Screen from the current display, turn T4 OFF then back ON again.



1. At the Welcome Screen, the Integrity Test will appear as an option button on the Control Panel.



2. Select the Integrity Test button to view the the following Integrity Test menu:

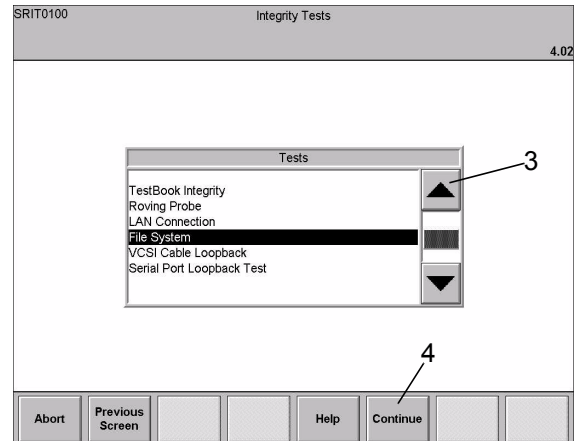

3. Use the up and down scroll arrows at the right hand side to highlight the required Test selection.
4. Select "Continue" from the Control Panel to run the selected test. A new display will be shown (dependent on specific selection) and the selected test will begin automatically.

NOTE: When performing Integrity Tests, it is important to remember that the results obtained can be affected by adverse transient conditions such as extremes of temperature or voltage spikes. Always repeat the tests several times to confirm any test failures.